



RS232 CONNECTOR
(DB9 FEMALE)

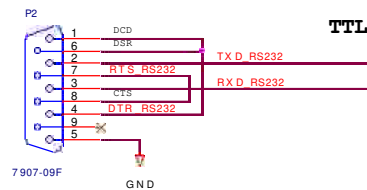

TTL to RS232 Adapter.

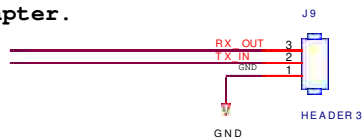

Connection to the cable:

- Pin 1 - Ground.
- Pin 2 - Tx from the Cable (Input TTL).
- Pin 3 - Rx to the Cable (Output TTL).

AMFELTEC Corp.

Date:

Sheet 1 of 1

2.1