

Flexible MiniPCI Express 2-Way Splitter

Hardware Manual

May 20, 2012

Revision 1.3

Contents

1	About this Document.....	4
1.1	Purpose.....	4
1.2	Feedback	4
1.3	Revision History	4
2	General Description.....	5
2.1	Introduction	5
3	Requirements/Features.....	7
3.1	Power Source	7
3.2	Software.....	7
4	Hardware Description.....	8
4.1	Board Layout.....	8
4.2	LEDs	9
4.3	Connectors.....	9
5	Installation	11
5.1	Hardware Installation	11
6	Ordering Information	12
6.1	Standard package.....	12
7	Appendix A: Limited warranty.....	13

Figures

Figure 1: Flexible MiniPCI Express 2-Way Splitter	5
Figure 2: MiniPCI Express Splitter Host board.....	6
Figure 3: MiniPCI Express Adapter board.....	6
Figure 4: MiniPCI Express Splitter Host board layout	8
Figure 5: MiniPCI Express Adapter board layout	8

Tables

Table 1: MiniPCI Express Host board LEDs	9
Table 2: MiniPCI Express Host board connectors	9
Table 3: MiniPCI Express Adapter board connectors	10

1 About this Document

1.1 Purpose

This document describes Hardware installation, features, specification and operation for AMFELTEC Flexible MiniPCI Express 2-Way Splitter.

1.2 Feedback

AMFELTEC Corp. makes every effort to ensure that the information contained in this document is accurate and complete at time of release. Please contact AMFELTEC Corp. if you find any errors, inconsistency or have trouble understanding any part of this document.

To provide your feedback, please send an email to support@amfeltec.com

Your comments or corrections are greatly valued in our effort for excellence and continued improvement.

1.3 Revision History

Rev. No.	Description	Rev. Date
1.0	Initial Release.	March 10, 2011
1.1	Update hardware installation instructions	June 01, 2011
1.2	Correction of Tables 1-3	August 08, 2011
1.3	Added Gen2 support	May 20, 2012

2 General Description

2.1 Introduction

Flexible MiniPCI Express 2-Way Splitter (Splitter) (Figure 1) is designed to support expansion of modern motherboards with limited number of MiniPCI Express connectors. Splitter splits standard MiniPCI Express motherboard slot into 2 independent MiniPCI Express slots.



Figure 1: Flexible MiniPCI Express 2-Way Splitter

It includes MiniPCI Express Splitter Host board (Figure 2) and 2 MiniPCI Express Adapter board (**Error! Reference source not found.**). The MiniPCI Express Host board has to be plugged into an upstream MiniPCI Express motherboard connector. MiniPCI Express Adapter board connects to the MiniPCI Express Host board via 10” PCI Express Flex cable. The expansion MiniPCI express add-in board has to be plugged into the standard MiniPCI express connector on the MiniPCI Express Adapter board.

Because of the flexible nature of the connection (unlike traditional rigid risers), expansion add-in MiniPCI Express board can be positioned away from the MiniPCI Express connector on the motherboard inside a computer chassis.

MiniPCI Express Adapter board has two mounting holes allowing them to be securely fixed inside a computer chassis.

The Adapter functions right out of the box, no additional software needs to be installed. The Mini PCI Host board has LEDs for displaying downstream PCI express Link status as well as expansion MiniPCI express add-in board “PRESENT” status.

3 Requirements/Features

3.1 Power Source

The power for MiniPCI Express add-in board (3.3V and 1.5V) is supplied via MiniPCI Express connector. MiniPCI Express Adapter board has standard 4-pin “Floppy drive” power connector for getting 5V power from standard ATX power supply or 3.3V power from external power supply.

3.2 Software

There is no software needed for normal operation.

4 Hardware Description

4.1 Board Layout

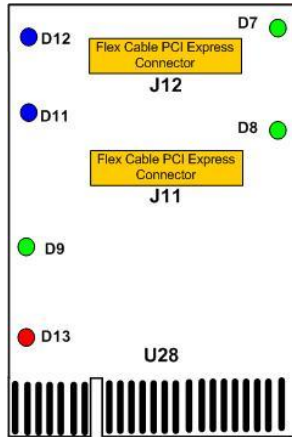


Figure 4: MiniPCI Express Splitter Host board layout

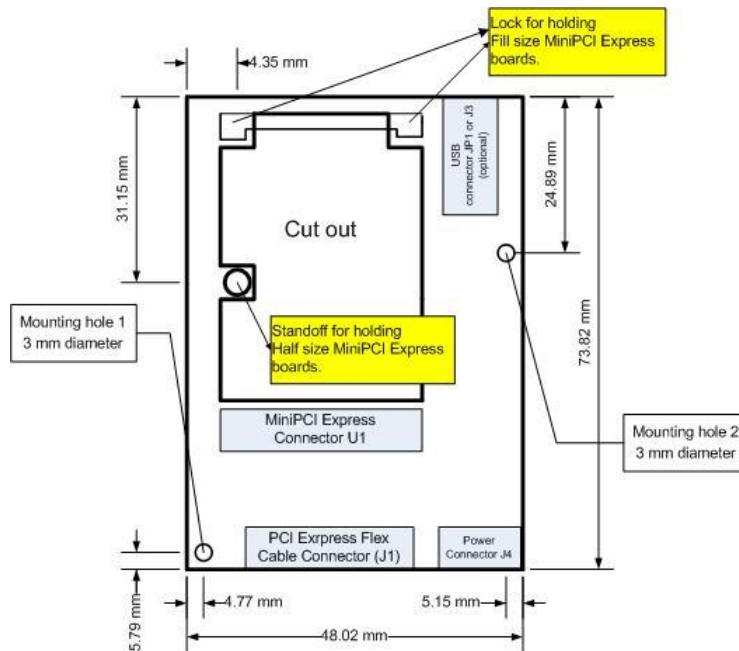


Figure 5: MiniPCI Express Adapter board layout

4.2 LEDs

Name	RefDes	Color	Usage
RESET	D13	Red	Global PCIe “RESET” signal
ACTIVE	D9	Green	Upstream port link status. (Solid Off - Lane is disabled, Solid On –Lane is enabled, 5GT/s, 0.5 seconds On, 0.5 seconds Off – Lane is enabled, 2.5 GT/s)
ACTIVE1	D8	Green	Downstream port 1 link status. (Solid Off - Lane is disabled, 0.5 seconds On, 0.5 seconds Off – Lane is enabled, 2.5 GT/s)
PRSNT 1	D11	Blue	First downstream link “PRSNT” signal
ACTIVE2	D7	Green	Downstream port 2 link status. (Solid Off - Lane is disabled, 0.5 seconds On, 0.5 seconds Off – Lane is enabled, 2.5 GT/s)
PRSNT 2	D12	Blue	Second downstream link “PRSNT” signal

Table 1: MiniPCI Express Host board LEDs

4.3 Connectors

RefDes	Type	Usage
U28	Upstream x1 PCI Express male connector	Connection to the upstream PCI Express bus on motherboard. (bandwidth up to 5Gbit/sec.)
J11,J12	PCI Express Flex Cable connector	Connection via Flex PCI Express Cable to the x1 PCI Express adapter boards. (bandwidth 2.5 Gbit/sec)

Table 2: MiniPCI Express Host board connectors

RefDes	Type	Usage
J1	PCI Express Flex Cable connector	Connection via Flex PCI Express Cable to the MiniPCI Host board.
J4	Standard ATX power connector (“floppy disk” type)	Incoming power for the expansion add-in MiniPCI Express board
JP1	10 pins 2 row 2.5mm Header	Connection to the USB interface of the MiniPCI Express add-in board (optional)
J3	USB type B standard connector	Connection to the USB interface of the MiniPCI Express add-in board (optional)
U1	Standard Mini PCI Express connector	Connection to the expansion add-in PCI boards (supports full and half size MiniPCI Express boards).

Table 3: MiniPCI Express Adapter board connectors

5 Installation

5.1 Hardware Installation

Following steps provide the exact sequence need to be followed in order to properly install the MiniPCI Express 2-Way Splitter from AMFELTEC Corp.:

Warning: Before touching anything inside the computer or any components, be sure to discharge your body's static electricity by touching a grounded surface.

- Turn off host computer and unplug it from the wall outlet.
- Remove the chassis cover or side panel from host computer. Refer to the computer manual for instructions if you need them.
- If the unit is a tower unit, turn it over on its side to make access easier.
- Ground yourself to the PC case. Attach a grounding wrist strap (if available) to the computer's metal chassis and your wrist. **CAUTION: If you choose not to use the grounding wrist strap, be sure to take adequate precautions to discharge static electricity from your body before touching any components.**
- Insert PCI Express Flex Cables into the connectors on the MiniPCI Express Host board and on the MiniPCI Express Adapters.
- Install the host board into the motherboard MiniPCI Express slot.
- Place and retain MiniPCI Express Adapter inside the chassis.
- Connect power to the MiniPCI Express Adapter.
- Insert expansion add-in MiniPCI Express board into MiniPCI Express connector on MiniPCI Express Adapter. Do not let it touch any of the components on the motherboard or MiniPCI Express Adapter.
- Now, you can close computer cover and power-up the host computer.



BE SURE THAT GREEN LED D4 and BLUE LED D3 ARE ON!

(Downstream Link status and MiniPCI Express Adapter board PRESENT)

6 Ordering Information

6.1 Standard package

Standard package include the following components:

- MiniPCI Express Splitter Host board
- 2x MiniPCI Express Adapter boards with PCI Express Flex cable

7 Appendix A: Limited warranty

AMFELTEC Corporation does not warrant that the operation of the hardware, software or firmware products will be uninterrupted or error free. AMFELTEC products are not intended to be used as critical components in life support systems, aircraft, military systems or other systems whose failure to perform can reasonably be expected to cause significant injury to humans. AMFELTEC expressly disclaims liability for loss of profits and other consequential damages caused by the failure of any product which would cause interruption of work or loss of profits, such as shipboard or military attachment.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. THE WARRANTIES PROVIDED HEREIN ARE BUYER'S SOLE REMEDIES. IN NO EVENT SHALL AMFELTEC CORPORATION BE LIABLE FOR DIRECT, SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUFFERED OR INCURRED AS A RESULT OF THE USE OF, OR INABILITY TO USE THESE PRODUCTS. THIS LIMITATION OF LIABILITY REMAINS IN FORCE EVEN IF AMFELTEC CORPORATION IS INFORMED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation on incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.